



DINAIR®

QUICK START GUIDE


QUICK START VIDEOS

WWW.AIRBRUSHMAKEUP.COM/BARBER

1 PRO COMPRESSOR & AIRBRUSH




2 ATTACH AIR HOSE

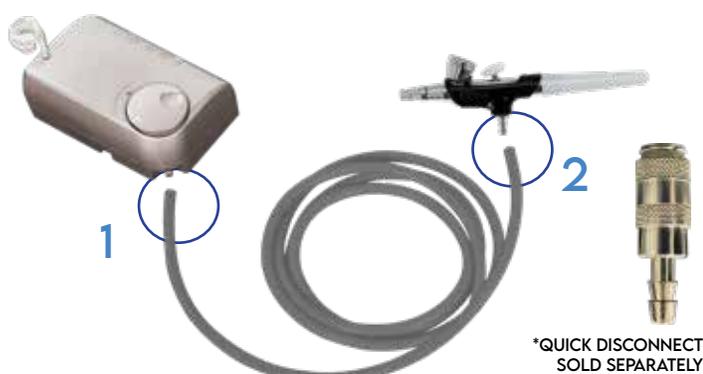

Start by taking the hose and connecting one end to the side of the compressor. Next, take your airbrush and connect the other side of the hose to the bottom of it. There is no need to twist the hose, simply push it onto the bottom of the airbrush until it is securely fastened. Now the airbrush is ready!

3 DIAL CONTROLS AIR

PUSH CENTER OF DIAL TO START COMPRESSOR.
VARIABLE AIR AND SPEED CONTROL

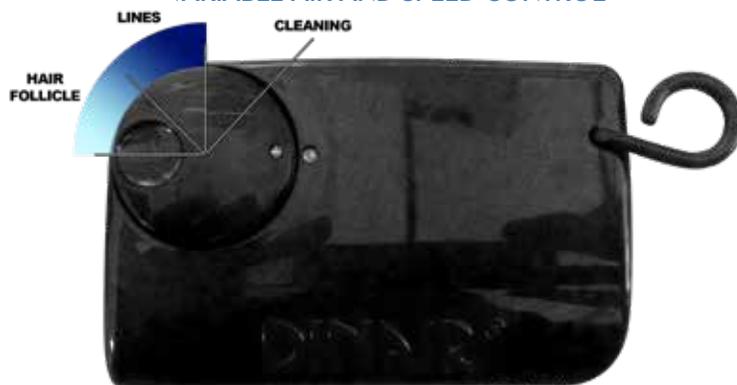


The lower the pressure (9 - 10 O'clock), the more control and less overspray. The lower the pressure, the dots/pixels are larger and look like natural hair follicles. Spraying at 11 - 12 O'clock will give you smaller dots/pixels for finer lines. To Quickly Clean your Dinair airbrush, turn the dial between 1 - 5 O'clock

4 FINGER POSITIONS

Index finger on lever controls makeup flow. Helps hold airbrush.

Rest against handle.


Airbrush rests between middle finger and thumb.

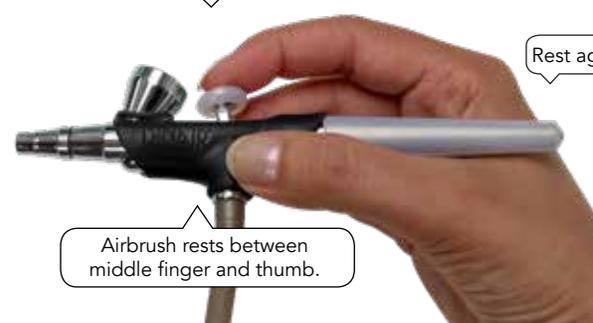

Hold the airbrush as you would hold a pen, with gentle grip and fingers extended. Find a comfortable grip and place your index finger on the lever. Use your index finger to pull back on the lever gently. Never use your thumb to control the lever.

DRAPE HOSE OVER YOUR ARM

5 LEVER CONTROLS MAKEUP

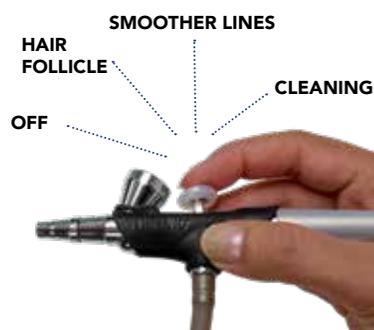

Pulling back on the lever will release the liquid into the air. The more you pull the lever back, the more liquid is released. Practice slightly pulling back and forth on the lever to release small amounts of liquid. The key is to not overspray. Your airbrush is a continuous flow airbrush. That means when the compressor is on, you will feel air coming out of the front of your airbrush. The only way to spray liquid is to pull back on your lever. When spraying your liquid, it should feel dry on the skin. If it feels wet, then you are over spraying.

IMPROVE YOUR SKILL MISTAKES EVAPORATE WHEN PRACTICING WITH WATER!

IMPROVE YOUR SKILLS AND PRACTICE YOUR TECHNIQUES BY ALWAYS USING WATER BEFORE MAKEUP.




Put a few drops of water into the makeup cup. This is where you will, in a short time, be adding and even mixing makeup colors. Use water first to practice, then try makeup and continue to practice.

6 DISTANCE CONTROLS BRUSHING SIZE



The Distance Guide will help you to rehearse holding the tip of the airbrush the correct distance from the face. It adjusts from about 1" out to 5".

7 VARYING DISTANCE

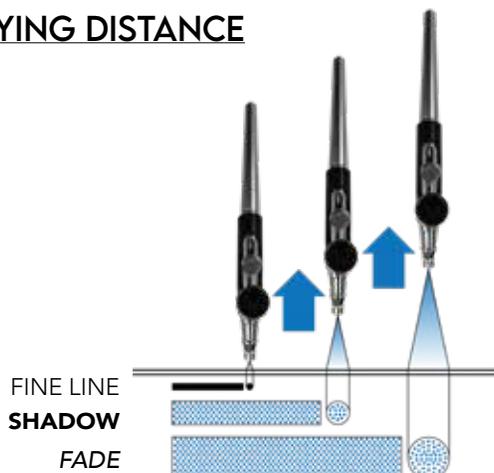


Don't start by pointing the airbrush at the chosen area where you want the makeup to begin. Start moving with air only, smoothly towards the chosen area. When you're in line with the chosen area, pull back the lever to release the hair makeup. Similarly, at the end of the line, pull the makeup lever forward but continue to move your airbrush for a second for fine tapered lines.

8 MIX AND MATCH

- MIX CUSTOM COLORS
Blend colors easily in the airbrush makeup cup, a few drops at a time to make custom shades.
- Use the back bubbling technique to mix a lighter color with a darker color to find the right shade in between.

Mix any Colors

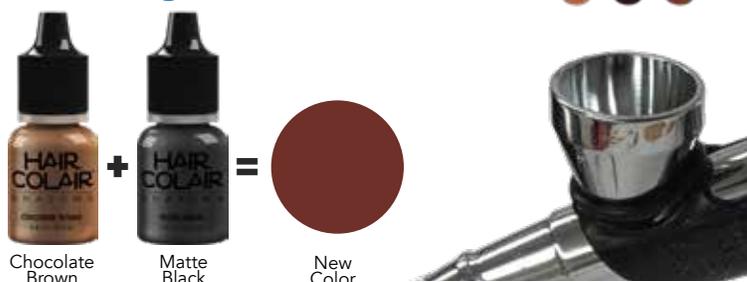

9 AIRBRUSH HELP

AIRBRUSH SPRAYING POORLY? TRY THIS!

ALWAYS CLEAN AIRBRUSH BEFORE APPLYING MAKEUP AND IN BETWEEN APPLICATIONS FOR BEST SPRAY QUALITY.



Add cleaner to brush and vigorously brush airbrush tip to remove stubborn dried makeup

10 DEEP CLEAN FULLY ASSEMBLED AIRBRUSH

A clean airbrush is a happy airbrush! To ensure optimal airbrush performance **ALWAYS** clean and store properly using our cleaning caps. Keep your airbrushes capped when not in use to prevent or loosen dried makeup.

CLEAN AND CAP YOUR AIRBRUSH IN BETWEEN APPLICATIONS.

1

1) Place the lever holder between the makeup cup and lever. 2) Attach the cap to the hose barb and twist to wrap the two together.

2

Push the nose cap on, up to the black cap line.

3

Put 5 - 10 drops of Dinair Airbrush Cleaner in the makeup cup.

4

Watch the Foaming Action Clean the Airbrush!
Squeeze the nose tip until you see a soap foam in the cup. This pumping action pushes the cleaner back and forth through the makeup cup and nose cap.

5

Put the cap on the makeup cup to continue cleaning. Be sure to clean, cap, and soak your airbrush between uses to keep it clean and ready.

www.AirbrushHelp.com

11 HAIR MAKEUP FAQ

If the hair makeup seems to go very fast, it is a pretty good guess the makeup is being applied more heavily than recommended.

How many drops are being used for Hair Makeup?

We generally recommend between 3 and 6 drops. Repeat if needed.



No Silicones, Parabens or Talc • Hug Proof, Rub Proof & Water Proof

More Questions?

Dinair's Award-Winning Customer Service Team can answer any and all of your questions, M-F, 8AM-5PM PST.

Call or visit us online!

AirbrushMakeup.com | 800.785.4770 | Help@Dinair.com

Need Additional Tips, Tricks & Techniques?

Learn how to airbrush **ANYTHING** and **EVERYTHING** online! Hair, Eyes, Nails, Tanning, and so much more!

www.AirbrushMakeup.com/Barber

Explore our Online Video Library and Online Courses:

www.AirbrushMakeup.com/howto/media/face/